

Service
Service
Service



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

Features :

- Contour Tracking System; comb adapts to the contours of the face.
- Precision Zoom Lock; for precise adjustability of the comb in 9 lengths between 1.5 mm and 18 mm.
- Beard length indication window.
- Charging indication (LED on handle).
- Maintenance free cutting element: no oiling required.
- Revolutionary wave shaped, self sharpening blades channel and cut hair for a precise and even trim.

Safety:

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Power system : AC/RC
- Batteries : 1x AAA NiMh
- Charging period : NiMh batteries : 10 hours
- Capacity : NiMh batteries : Up to 40 minutes

DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- No specific issues

 
 
 
 
REPAIR INSTRUCTIONS

Notes

- * In order to guarantee the longest possible working life of the battery :
 - do not charge for more than 24 hours
 - do not keep the charging unit permanently plugged in
 - discharge the battery completely once a year by letting the motor run until it stops
- * The appliance should be charged again, when not used for a long period

OPTIONAL (accessories)

- No specific issues

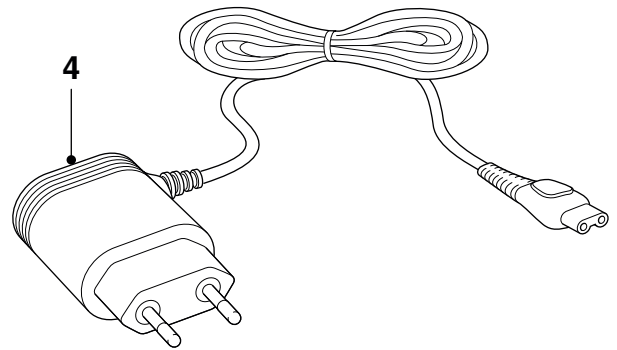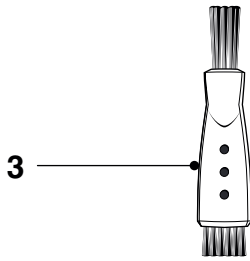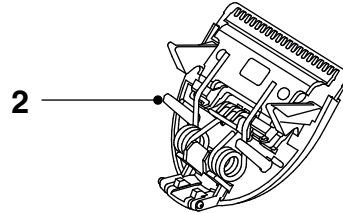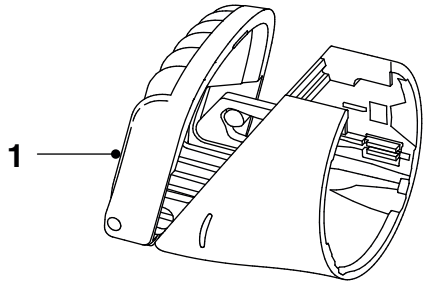

Pos	Service code	Description
1	4203 035 52000	Comb
2	4203 035 76420	Cutter Assy
3	4222 036 02770	Cleaning Brush
4	4222 036 04080	Adapter EU
	4222 036 17060	Adapter GBR
	4222 036 05110	Adapter CAN
	4222 036 05160	Adapter USA