

Pos. codice
ricambio descrizione



01 KW712994 POWER
HANDLE -
VARIABLE
SPEED+PULSE
- EU PLUG



02 KW713000 GEARBOX
ASSEMBLY
INCLUDING
DAMPER
(masher)



03 KW713001 PADDLE
ASSEMBLY
(masher)



04 KW713002 'O' RING -
PACK 5
(masher)



05 KW712999 MASHER
ASSEMBLY
COMPLETE



06 KW712995 CHOPPER
BOWL
ASSEMBLY



07 KW712996 CHOPPER
GEARED LID
ASSEMBLY



08 KW712997 KNIFE BLADE
ASSEMBLY
INCLUDING
GUARD
(chopper)



09 KW712998 RUBBER
BASE/LID
(chopper)
*14cm approx



10 KW712960 ASSIEME TRI-
LAMA
COMPLETA
DI
PROTEZIONE
LAMA



11 KW712962 ASSIEME TRI-
LAMA
"BIGFOOT" -
COMPLETO
DI
PROTEZIONE
LAMA



12 KW712963 ASSIEME
FRUSTA
COMPLETA
CON MOTORE



13 KW712964 MOTORE PER
FRUSTE



14 KW712958 BICCHIERE
0.75L CON
BASE



15 KW712959 RUBBER
BASE/LID (for
beaker) *11cm
approx